



Extension Instruction Addendum

Make sure you read and understand these instructions before beginning your installation

Following are additional steps for installing sills with an extension kit.

- 1** Cut the extension to the width of the opening, as well as the main sill.
- 2** Cut the T-Strip to the width of the opening. The length of the T-Strip should match the length of the main sill and the extension.
- 3** Dry fit the extension, main sill, and

T-Strip in the opening to ensure proper fit before gluing in place.

- 4** For Standard sills, if the main sill extends past the wall more than you would like, you can rip the main sill to a more desirable depth.
- 5** Once you have ensured proper fit, apply balls of polyurethan construction adhesive to the bottom of the sill extension. Apply the adhesive 3 to 6 inches from each end, and 12 inches



apart.

- 6** Apply a bead of caulk to the window frame where the sill extension will meet.
- 7** Firmly insert the sill extension in place, making sure it fits snugly against the window frame. Clean any caulk that oozes out.
- 8** Apply balls of adhesive to the remaining original sill area. Apply the adhesive in balls, 3 to 6 inches from each end, and 12 inches from each other.


- 9** Insert the main sill in place, leaving a small gap for the T-Strip.

- 10** Apply a bead of caulk in the gap between the main sill and the sill extension. Insert the T-Strip and push the main sill snugly against the T-Strip and sill extension. Clean off any caulk that oozes out.

- 11** Apply a bead of caulk in the joints between the sill and the window, and the sill and the drywall. Smooth the caulk with a wet finger.

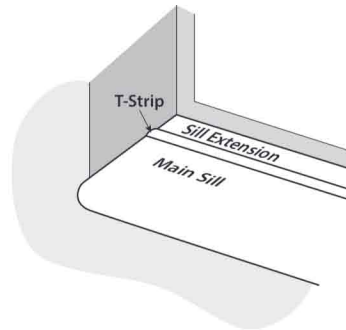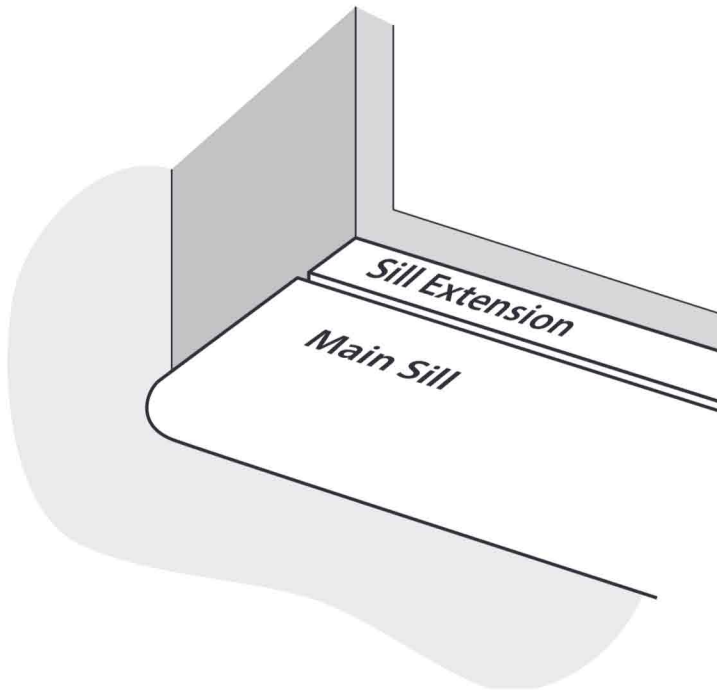

Standard Sill

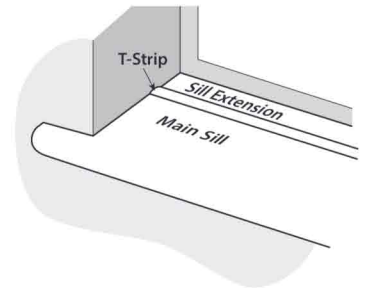

Premium Sill