


# Installation Procedures

\*\*\*\*\*DO NOT CUT OR WELD VIGIL PRODUCT\*\*\*\*\*

## Installation of Vigil Antislip Commercial Stair Treads

**Tools** : Acetone or similar solvent  
: Cotton rags  
: Caulking gun  
: Rubber gloves

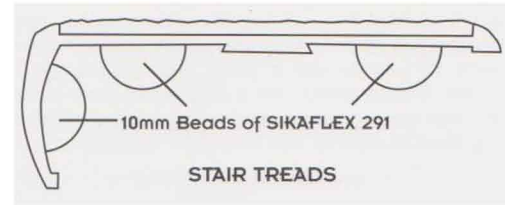

## Procedure

1. Using solvent and rags clean the concrete/tiles where the Stair Treads are to be placed and clean the backs of each Stair Tread. Ensure that rubber gloves are worn.
2. Place each Stair Tread in the desired position on each step to ensure they fit correctly.
3. Fit a tube of adhesive on to the caulking gun, pierce tube seal and screw on nozzle. Trim off end of nozzle to obtain required bead of adhesive.
4. Squeeze 3 beads of adhesive onto the back of the first Stair Tread to be installed. Starting from the top step.
5. Place the Stair Tread in the required position on the step and apply pressure both downward and backward so that adhesion is achieved to the top of the step as well as the leading edge.
6. Repeat procedures for the rest of the Stair Treads.
7. Using acetone, clean any excess adhesive from around the Stair Treads before it cures.
8. Ensure that pedestrian traffic is kept away from the steps until the adhesive is cured. (approximately 6-8 hours)

Please Note:

- *Barricade off each flight of steps as the stair treads are being installed*
- *Ensure that all stair treads are fully secure*
- *Always use appropriate personal protective equipment such as earplugs and safety glasses while performing installation*