
## **Instructions**


## **Contents**


- PegBoard PX™
- Self-Stick Spacer™:
  - Spacers
  - Adhesive Dots


## **Installation Instructions**

- 1. Fasten onto wall using peg hook holes for mounting
- 2. Locate mounting holes onto structural wall components (ie wall studs) wherever possible.
- 3. Use holes shown in red in illustrations below.
- 4. Use any remaining holes for mounting into structural wall components (ie wall studs) shown in green in illustrations below.
  - 5. Use as many structural wall components (ie wall studs) as possible.
  - 6. Remove clear plastic liner from adhesive dots.
  - 7. Press spacer to adhesive dot, then press spacer to desired location on PegBoard PX™
  - 8. Do not over tighten screws.

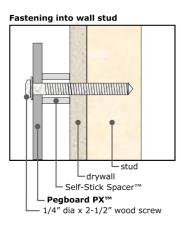

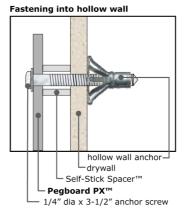

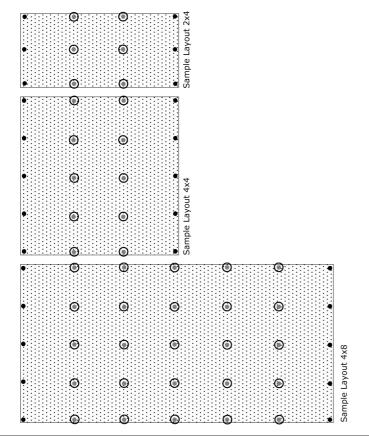

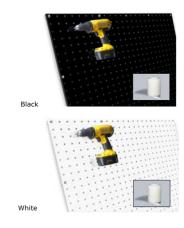

PegBoard PX™ P/N: HPBPX



