

Instructions

Contents

1. MagPanel™
2. mounting screws

Installation Instructions

1. Remove the protective plastic film from the product surface
2. Fasten onto drywall using mounting screws included. Using a screw driver, install the screw through the pre-drilled mounting holes into your drywall.
3. For mounting onto other wall types such as masonry, etc use appropriate fasteners/anchors sold elsewhere

Helpful Hints

- Do not over tighten screws
- For larger panels, the interior area of the panel may have some flex after being mounted to a wall. Double-faced foam tape may be used on the back side of the panel to eliminate this flex

FAQ

Q: How can I match the color of the screws with my MagPanel™?

A: For color matching screw heads, check out Snap-Caps® by Pro-Dec: www.pro-dec.com Select a Snap-Cap® to fit #6 screw.

Q: How do I attach fabric/wallpaper/graphic to my MagPanel™?


A: Attaching your own fabric, wallpaper or graphic onto the MagPanel is a great way to customize it's appearance:

1. Use a spray adhesive to attach your material to the MagPanel™. There are many types of spray adhesives, such as 3M brand. Consult your local fabric store, craft store or hardware store for the best spray adhesive recommended for the type of material you are attaching.
2. Try to use the thinnest material you can. The thicker the material, the more the magnetic holding strength will be reduced. Generally speaking most people don't notice much of a magnetic strength reduction with typical thin materials.
3. To mount your finished MagPanel™ onto your wall, either poke the mounting screws thru the material and use the existing mounting holes of the MagPanel™ OR attach the MagPanel™ to the wall using a construction adhesive (like Liquid Nails™ brand).




Easy Mounting

Fastening into hollow wall with included mounting screws

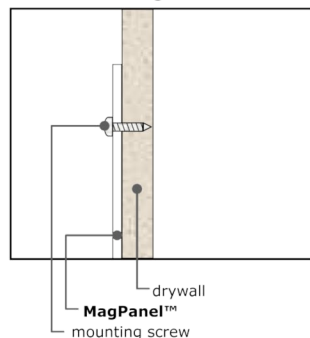

Alternate Mounting

Fastening into wall stud

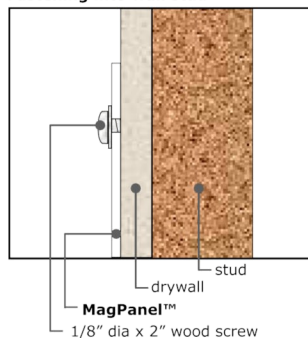

Fastening into hollow wall

