




# C627

Nylon Brush  
Door Sweep

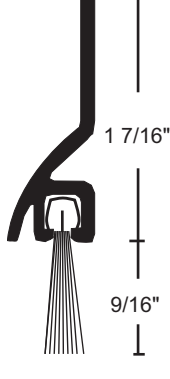

*See [ngp.com](http://ngp.com) for  
All Applicable  
Certifications for  
this Product.*



POSITIVE PRESSURE  
TESTED GASKETING  
MATERIALS FOR  
FIRE DOORS FOR  
APPLICATION TO  
HOLLOW-METAL-  
TYPE FIRE DOORS  
RATED UP TO 3  
HOURS AND WOOD-  
TYPE FIRE DOORS  
RATED UP TO  
1½ HOURS.  
CATEGORY H

SMOKE AND  
DRAFT CONTROL  
GASKETING  
(CATEGORY H)  
TESTED TO UL  
1784; MEETS  
REQUIREMENTS  
OF NFPA 105, IBC  
FOR USE ON "S"  
LABEL DOORS.



**[ngp.com](http://ngp.com)**  
**1-800-NGP-RUSH**

FAX:  
(800) 255-7874


QUOTES:  
[quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS:  
[orders@ngp.com](mailto:orders@ngp.com)



## INSTALLATION INSTRUCTIONS

### C627

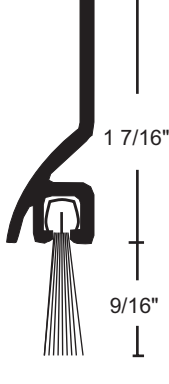

1. Remove brush from metal retainer.
2. Cut brush to fit opening, using the cutting section of pliers or diagonal cutters. If bristles are not secure, crimp the end of the metal or use a drop of adhesive to secure the brush.
3. Cut the metal retainer to length.
4. Replace brush in metal retainer.
5. With door closed, position sweep at bottom of door and tap down until contact is made between the sweep and the threshold. Mark screw holes.
6. Drill pilot holes for screws with a  $\frac{7}{64}$ " bit.
7. Install with screws provided.
8. Slightly peen the ends of each retainer to secure the brush from moving.
9. Adjust position so sweep does not impede proper closing and latching of door.

**ngp.com**

**1-800-NGP-RUSH**

FAX: (800) 255-7874

QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS: [orders@ngp.com](mailto:orders@ngp.com)

#### **MEMPHIS**

4985 East Raines Road

Memphis, TN 38118

#### **CARSON CITY**

3689 Arrowhead Drive

Carson City, NV 89706