




**Koffler Sales
Company**

Specialists in Floor and Wall Protection
For Over 50 Years

Timberline Steel Corner Guards

Installation Instructions

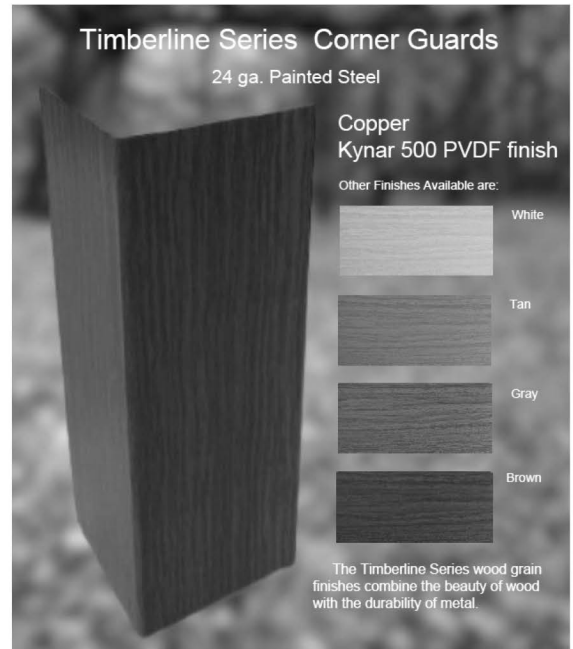

STEP 1

Wall surfaces must be clean, dry, and free from dust and grease. Wipe the wall surface with a solvent to assure all grease, dust, and dirt are removed. Make sure that the cleaning solvent used will not damage the finish on the wall surface.

STEP 2

corner guards can be ordered cut to size however if required, you can cut the corner guard by using a Jig Saw, Band Saw or Hand saw with a metal cutting blade. Make sure that all cuts are square and burr free.

▶ Timberline Steel Corner Guards

Using Adhesive (Provided by Others)

Recommended for attaching to unsealed wood, sealed and unsealed plaster/drywall, concrete block and brick only.

STEP 1

Wall surfaces must be clean, dry, and free from dust and grease. Wipe the wall surface with a solvent to assure all grease, dust and dirt are removed. Make sure that the cleaning solvent used will not damage the finish on the wall surface.

STEP 2

If required, cut the corner guard to required length, ensuring that all cuts are square and burr free.

STEP 3

Apply 3/16" beads of adhesive to each leg of the corner guard by following the example application chart on the right.

3" legs	3 beads per leg
2-1/2" legs	3 beads per leg
2" legs	2 beads per leg
1-1/2" legs	2 beads per leg
1" legs	1 bead per leg
3/4" legs	1 bead per leg

STEP 4

Place the corner protector on the corner and push firmly into position. Be sure to use an acceptable vinyl adhesive, such as liquid nails, and to follow the usage instruction on the adhesive.



Storage & Handling

The corner guards are shipped unassembled. Upon receipt, the corner guards should be stored in the horizontal position at room temperature (65 °-75 ° F). This is a finished product with vinyl masking; store in a protected, clean and dry area away from direct sunlight.



Cleaning Instructions

STEP 1

For best results, the use of liquid cleaners such as "409," "Fantastic," and "Mr. Clean," etc. are recommended. The use of powder cleansers is not recommended. Use of such cleansers can leave residue which is difficult to remove.

STEP 2

Do not use chlorinated or aromatic hydrocarbons, esters, or ketones to clean. Avoid the use of heavy degreasers, compounds containing surfactants, and abrasive compounds or cleaning devices.



Caution

DO NOT walk on the corner guards.

DO NOT store anything on top of the corner guards.