

CAST TREADS AND NOSINGS PROVIDE:

Protection of the step edge from damage. Safe, anti slip walking surface. Visual contrast makes step edge easier to see.

FEATURES:

Maximum Durability in Rough Use
Indoor or Outdoor Use
Resistant to Unusual Corrosive Environment
New Construction or Renovation
Anti-slip Properties
Ready to Install Convenience

ABRASIVE CASTINGS SPECIFICATION:

! Provide Alumogrit® or Ferrogrit® type 101 safety treads/nosings as manufactured by Wooster Products Inc. for interior and exterior stairs.

! Abrasive shall be #20 virgin grain Aluminum Oxide abrasive, integrally cast into the walking surface to a minimum depth of 1/32 inch.

! Safety nosings up to 6" deep with cross hatched surface being installed into wet concrete shall have a feature strip along the back edge. Feature strip is a trademark of Wooster Products Inc.

! Concealed type anchors shall be slotted rivet type, integrally cast into the body of the nosing a minimum of 3/8 inch.

! Cast metals used shall conform to the following specification:

Alumogrit® (Abrasive cast aluminum): No. 43 prime ingot; low copper content; corrosion resistant.

Ferrogrit® (Abrasive cast iron): Class 20 iron; high silicon; machinable; hyper eutectic.

! Any holes or countersinks shall be machine made; screw heads shall not protrude above tread surface; cored holes or countersinks are not acceptable.


! All metal types shall have shot blasted finish; Ferrogrit treads shall have one coat shop-black paint.

! Crosshatching and fluting shall be 1/16 inch deep minimum and shall be clean and well defined.

! Treads and nosings shall be manufactured, packed and shipped so as to arrive at the job site in good condition.

! Nosings shall terminate not more than 4" from ends of steps for poured concrete stairs; for concrete filled steel pan stairs, nosings shall be full length of steps less 1/8 inch clearance.

FOR POURED CONCRETE

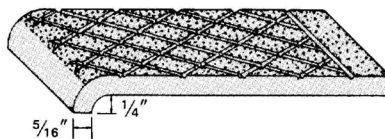

TYPE 101

Nose 1/4" underside

Standard thickness - 5/16"

Standard widths - 3", 4" and 6"

DRAWING NOT TO SCALE

The type 101 is available with the following types of anchors: Wing Anchors Nuts & Bolts, Concealed Integral Anchors, Screws & Expansions Shields

GUIDELINES FOR THE INSTALLATION OF METAL SAFETY TREADS OR NOSINGS INTO NEW CONCRETE OR STEEL PAN FILLED STAIRS:

The use of very large aggregate in the concrete mix may make placement of the safety nosing difficult.

Safety nosing placement may be difficult in concrete with very low slump.

Place concrete into the stair forms or steel pans as quickly as possible; schedule pours so as to install the metal safety nosings quickly before initial set of concrete occurs.

Puddle the concrete, tamp the safety nosing to insure proper concrete formation around the anchors.

Remove protective tape (if used) as soon as practical.

Order nosings or treads well in advance of the pour or installation date.

Close stairway after pour; permit no use for 24 hours.