


Color Aluminum Corner Guards Installation

Instructions

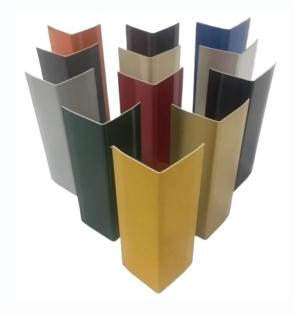

Corner Guards with Double Sided Tape

STEP 1

Wall surfaces must be clean, dry, and free from dust and grease. Wipe the wall surface with a solvent to assure all grease, dust, and dirt are removed. Make sure that the cleaning solvent used will not damage the finish on the wall surface.

STEP 2

CAP corner guards can be ordered cut to size however if required, you can cut the corner guard by using a Shop Saw with a non-farrious metal cutting carbide tooth blade. Make sure that all cuts are square and burr free.

STEP 3

Peel off backing tape from one leg entirely, then peel back and "dog ear" the tape off to one side partially on the second leg. Place leg with the fully exposed tape to the wall, then remove the remainder of the tape backing from the second leg. Press firmly along the entire length of the corner protector to ensure a good bond.

Color Aluminum Corner Guards

Using Adhesive (Provided by Others)

Recommended for attaching to unsealed wood, sealed and unsealed plaster/drywall, concrete block and brick only.

STEP 1

Wall surfaces must be clean, dry, and free from dust and grease. Wipe the wall surface with a solvent to assure all grease, dust and dirt are removed. Make sure that the cleaning solvent used will not damage the finish on the wall surface.

STEP 2

If required, cut the corner guard to required length, ensuring that all cuts are square and burr free.

STEP 3

Apply 3/16" beads of adhesive to each leg of the corner guard by following the example application chart on the right.

STEP 4

Place the corner protector on the corner and push firmly into position. Be sure to use an acceptable vinyl adhesive, such as liquid nails, and to follow the usage instruction on the adhesive.

3" legs	3 beads per leg
2-1/2" legs	3 beads per leg
2" legs	2 beads per leg
1-1/2" legs	2 beads per leg
1" legs	1 bead per leg
3/4" legs	1 bead per leg



Storage & Handling

The corner guards are shipped unassembled. Upon receipt, the corner guards should be stored in the horizontal position at room temperature ($65 \circ -75 \circ F$). This is a finished product **with vinyl masking**; store in a protected, clean and dry area away from direct sunlight.



Cleaning Instructions

STEP 1

For best results, the use of liquid cleaners such as "409," "Fantastic," and "Mr. Clean," etc. are recommended. The use of powder cleansers is not recommended. Use of such cleansers can leave residue which is difficult to remove.

STEP 2

Do not use chlorinated or aromatic hydrocarbons, esters, or ketones to clean. Avoid the use of heavy degreasers, compounds containing sur-factants, and abrasive compounds or cleaning devices.



Caution

DO NOT walk on the corner guards. **DO NOT** store anything on top of the corner guards.