


Installation Instructions

Nu-Tree Wall Guard

FIG. 1

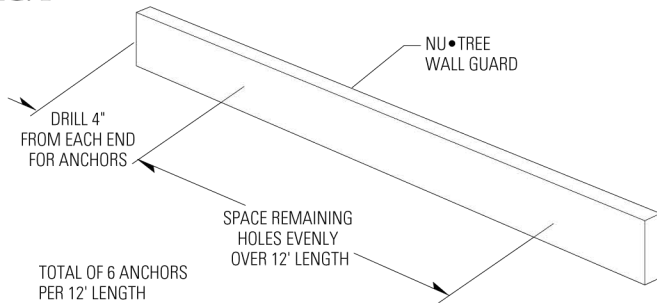


Please read all instructions before installing wall guard.

1. Cut wall guard to desired length. (Note: Trim factory edges square before installation). Select a 3/16" diameter, bevel-headed fastener that is an appropriate length for the wall guard and substrate. Drill 3/16" holes on wall guard with a countersink to accommodate the fasteners. See Figure 1.


NOTE: For an exterior application, use stainless steel fasteners.

FIG. 2

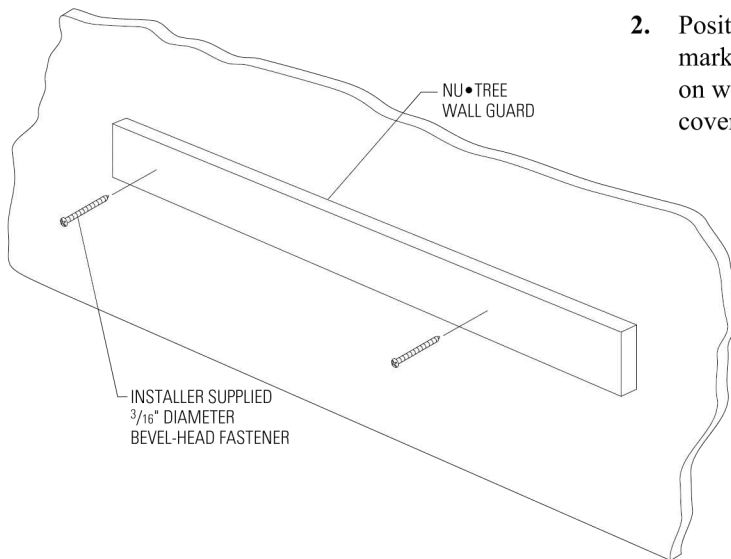

2. Position wall guard on wall at desired height. Level and mark holes. Drill marked holes on wall. Mount wall guard on wall and tighten screws to secure. Screw head can be covered with colored caulk. See Figure 2.

FIG. 3

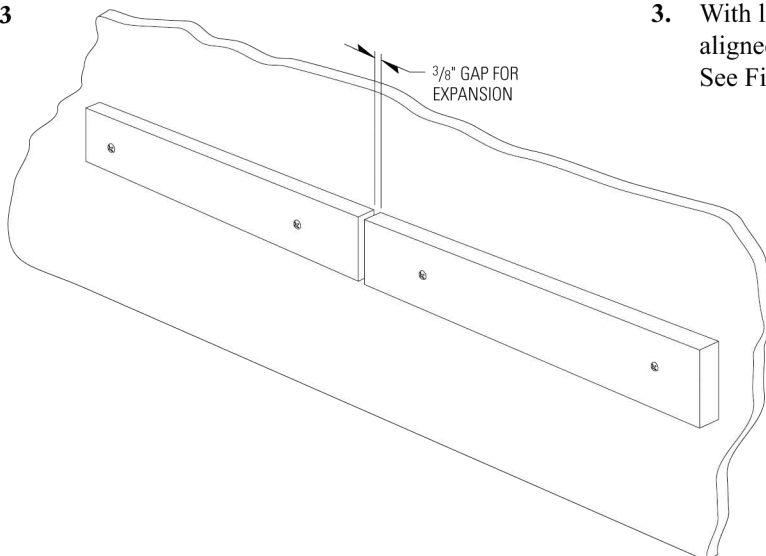

3. With lengths over 12', leave a 3/8" gap between the aligned pieces of wall guard for expansion. See Figure 3.