




BUILDING TRUST



## Installation Procedure

---

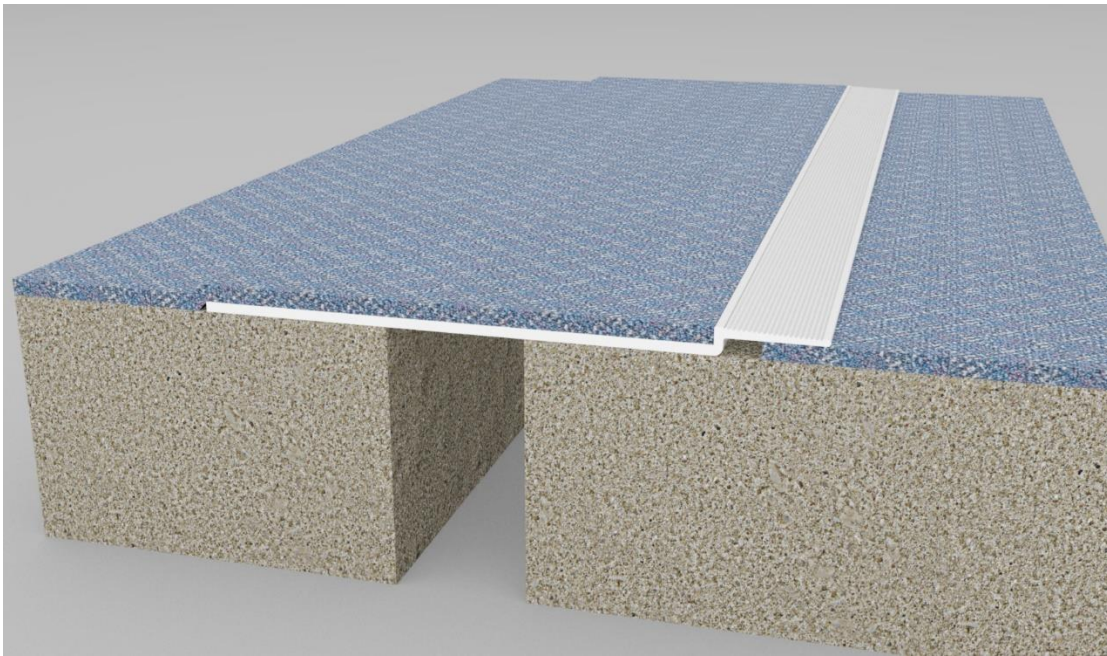

### Wabo®FastFloor FJS

Interior Floor Expansion Joint System

The following installation procedure is very important and must be fully understood prior to beginning any work. To ensure proper installation and performance of expansion joint system the following actions must be completed by the installing contractor. Failure to do so will affect product warranty.

- 1) Carefully read and understand installation procedure. Contact Sika Emseal's Technical Service Department at 508-836-0280 for product assistance.
- 2) Inspect all shipments and materials for missing or damaged components and hardware. Contact Customer Service at 508-836-0280 with Emseal's order number and invoice for prompt assistance.
- 3) Inspect substrate or adjacent construction for acceptance before beginning work. Report unacceptable construction to the project manager for scheduled repair work.
- 4) Review Emseal shop drawings for project specific detailed information if Engineering services were purchased at time of order.



BUILDING TRUST



## Health & Safety

---

During the installation of any Sika Emseal product, appropriate personal protective items should be worn at all times, including but not limited to the following:

- Proper work clothing
- Safety glasses
- Safety boots
- Gloves
- Hard hat




Local rules and regulations regarding safe work environments and health should be followed.


## Product Components

---

The following components are required for the installation of this product:

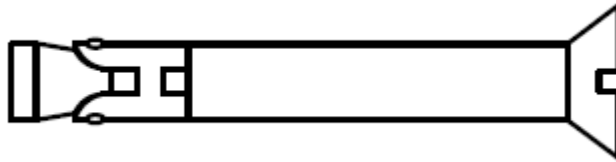

1/4" dia. x 2" lg threaded concrete anchor (P/N 6913)

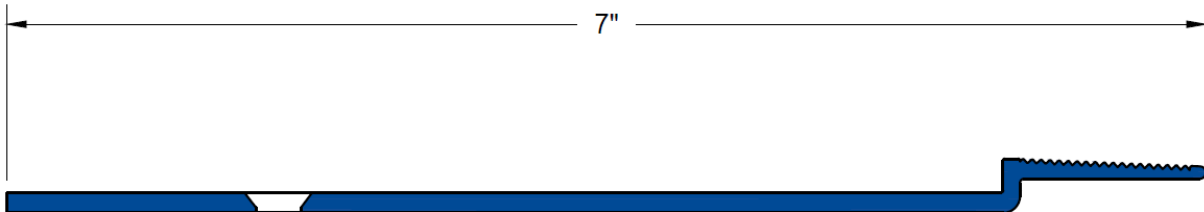

### Floor Cover

P/N's: #FJS-200.125

#FJS-200.250

#FJS-200.375




BUILDING TRUST



# Installation


1

Make sure the floor is level. High spots should be ground down and low spots filled in. Cut and fit expansion joints to required length. If installing more than 1 piece, lay out entire run to ensure proper alignment. Make sure the anchors are at least 1 1/4" from floor gap wall.

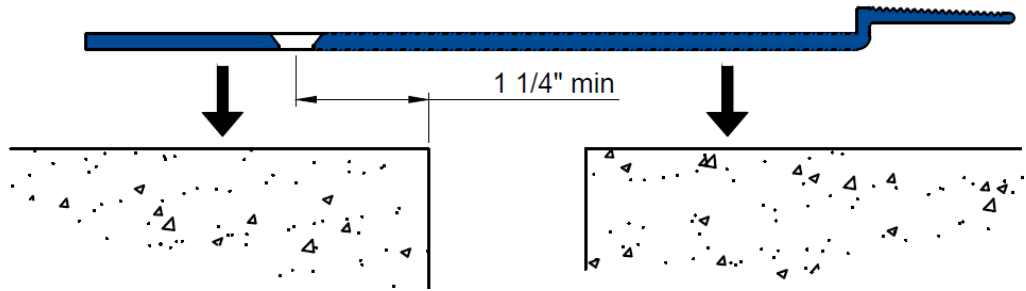


2

Drill end holes first. This ensures that the expansion joint will not move and alignment with other joints is obtained. Follow anchor manufacturer's recommendations for drilling operation. Drill holes to proper depth and clean out holes.

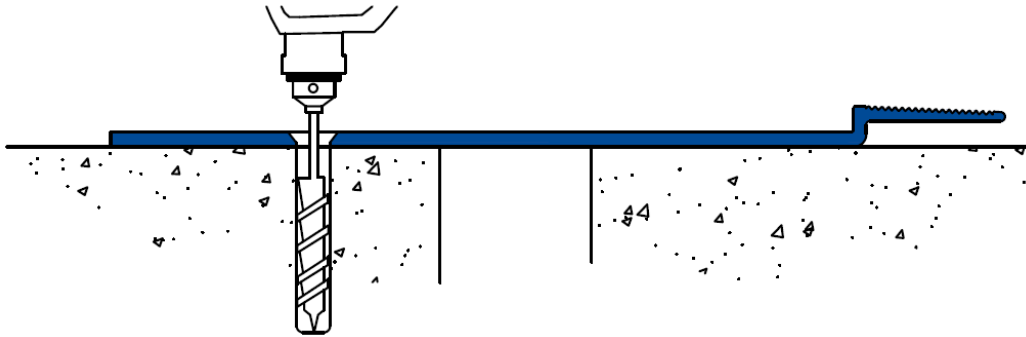

3


Follow anchor manufacturer's recommendations for proper anchor installation. Once anchors are in the end holes, drill remaining holes and install remaining anchors. Flash patch on anchored side and feather back 2-3 ft. to ensure a smooth transition.

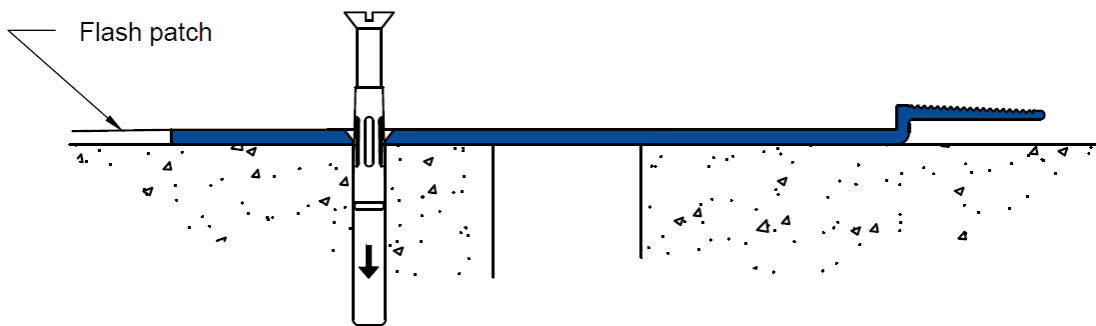

---

4

Cut in floor covering, make sure it abuts tightly to the edge of the wing on the fixed portion of the expansion joint. The floor covering should extend only halfway under the unsecured wing (note open space in diagram).

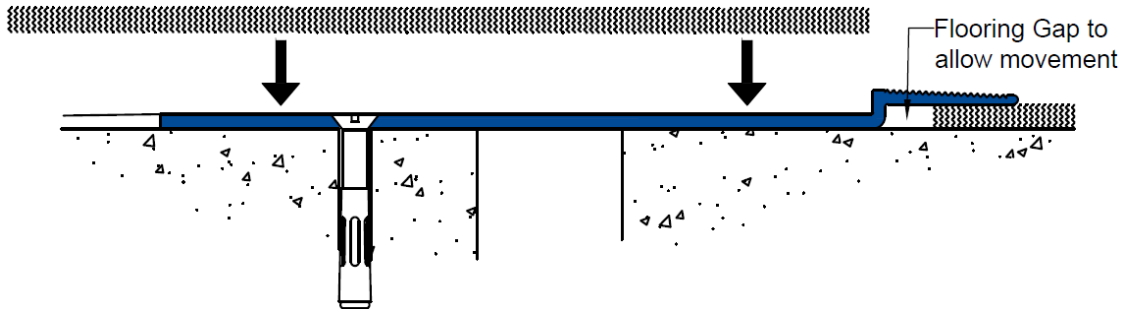

Information provided herein, including but not limited to, any drawing, design, photograph, graphic, or statement(s) ("Materials") are proprietary and the property of Sika Emseal ("Company"). Reproduction, translation, or reduction to any electronic medium or machine readable form, in whole or part, is strictly prohibited, except for the express purpose for which it has been furnished, without prior written consent of Company. All Materials contained herein are provided by Company for information purposes only. Company reserves the right to amend or withdraw any information contained in the Materials without notice. All technical or other advice by Company, whether verbal or written, concerning products, or the use of products in specific situations ("Advice") is given by Company and is used at the User's own risk.

Sika Emseal  
25 Bridle Lane, Westborough, MA 01581 USA  
Phone: 508-836-0280 / Fax 508-836-0281  
[www.emseal.com](http://www.emseal.com)

Rev. 1.1 06-27-2025

