


# SANITIZER STAND ASSEMBLY INSTRUCTIONS

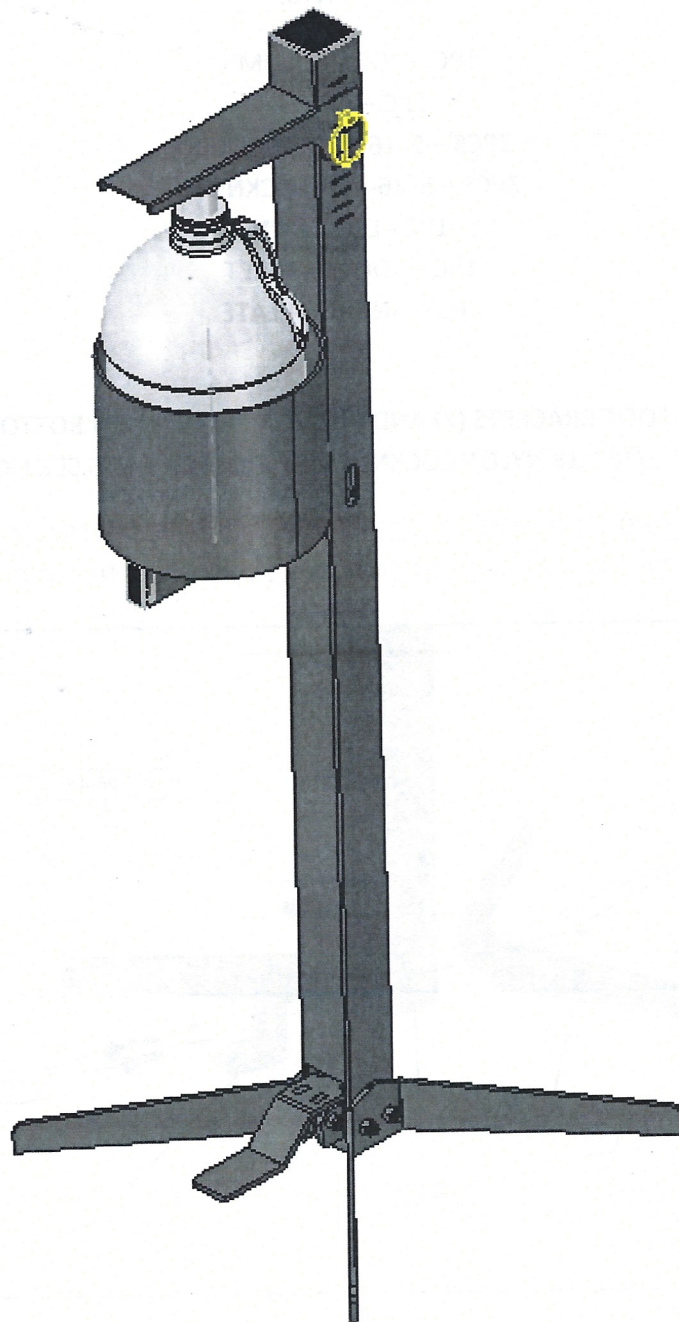

# SANITIZER STAND

## ASSEMBLY INSTRUCTIONS

### CONTENTS:

- 1PC – POST/COLUMN
- 1PC – COVER
- 2PCS – 5/16-18 X 3" BOLTS
- 2PCS – 5/16-18 X LOCKNUTS
- 1PC - LYNCH PIN
- 1PC – LOCK BRACKET
- 1PC – ANCHOR PLATE

**STEP 1: BASE ASSEMBLY – ATTACH FOOT BRACKETS (2) AND ANCHOR PLATE (1) ON BOTTOM OF POST (1) WITH 5/16"-18 X 3" BOLTS (2) AND 5/16"-18 NYLON LOCKNUTS (2). TIGHTEN NUTS SEE FIGURE 1 BELOW**

**ATTENTION: MAKE SURE TO ANCHOR COLUMN TO SECURE SURFACE THROUGH 5/16" HOLE IN ANCHOR PLATE. TO PREVENT TIPPING DURING USE (ANCHOR HARDWARE NOT INCLUDED)**

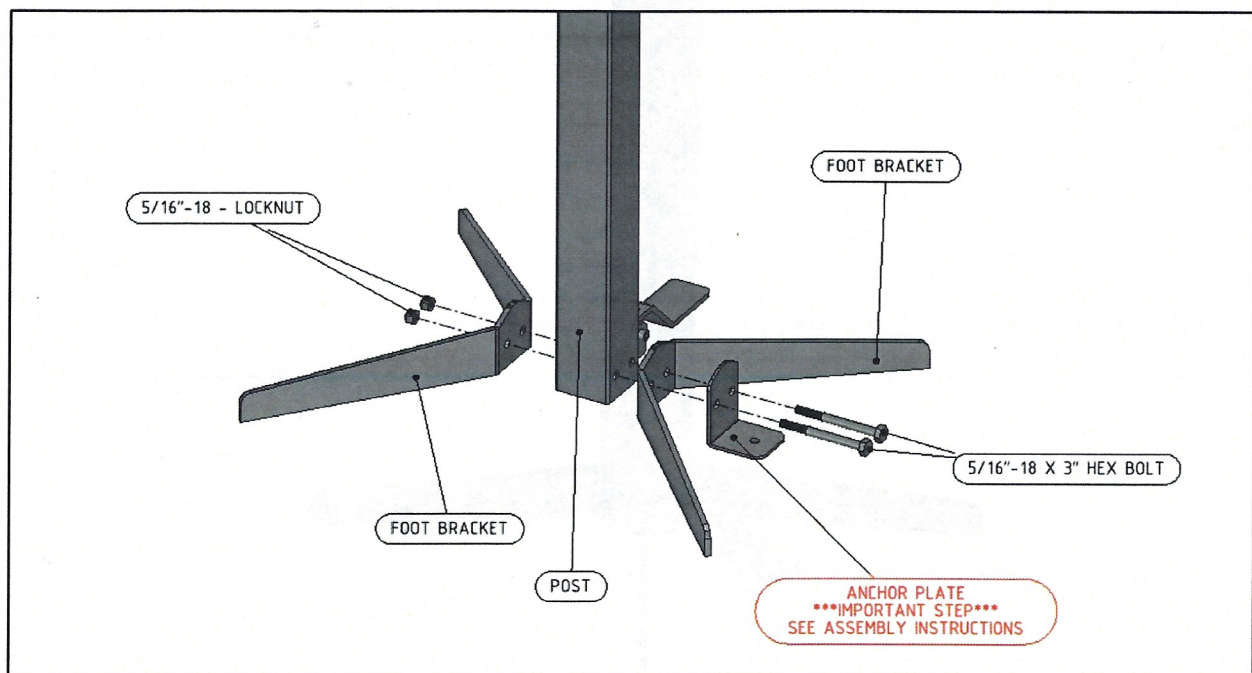


Figure 1



# SANITIZER STAND

## ASSEMBLY INSTRUCTIONS

**STEP 2:** INSERT BOTTLE IN BIN ENSURING THAT THE PUMP IS POINTING TOWARDS FRONT SEE **FIGURE 2** BELOW.

**STEP 3:** PLACE COVER (1) ON TOP OF POST. LINE UP SLOTS ON SIDE OF COVER WITH SLOTS ON SIDE OF POST WHILE MAKING SURE TOP OF PUMP IS ENGAGING WITH UNDERSIDE OF COVER SEE **FIGURE 3** BELOW.

**STEP 4:** INSERT LOCK BRACKET THROUGH SLOT IN COVER AND INSERT LYNCH PIN INTO LOCK BRACKET TO COMPLETE ASSEMBLY.

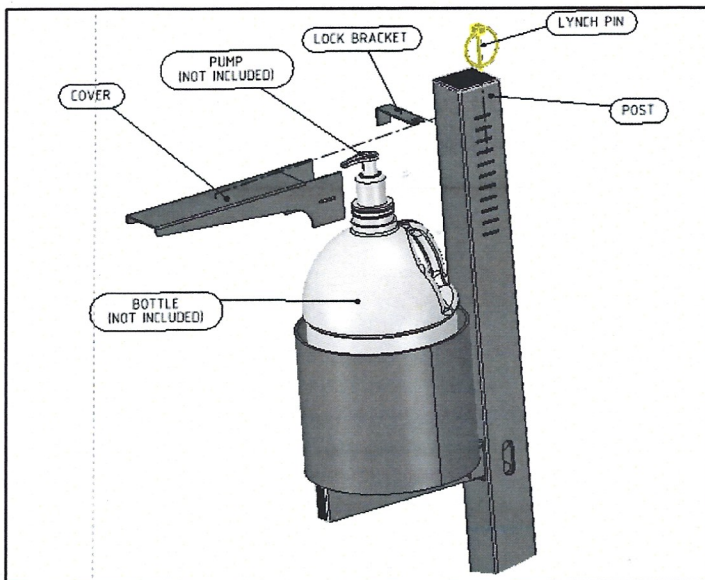


Figure 2

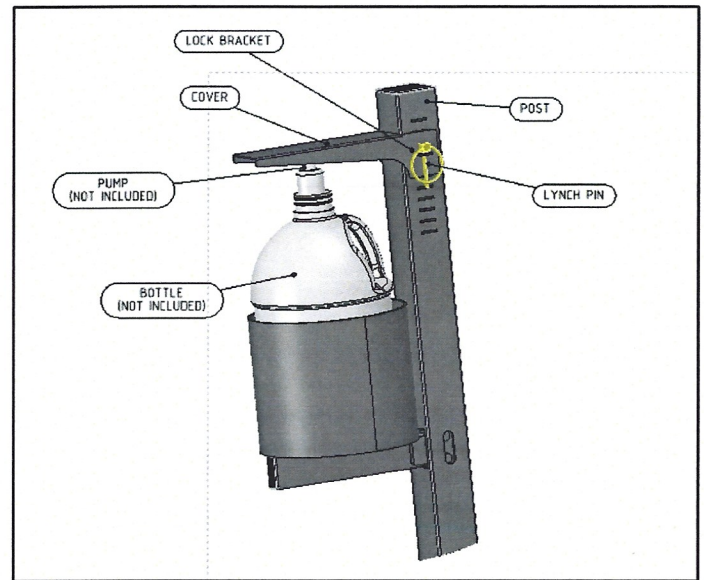


Figure 3

### Legal Disclaimer

The Sanitizer Stand is intended to be and has been designed as a foot operated sanitizing stand to be used only after being anchored to a secure surface. It must not be used for any purpose other than that for which it was intended and designed. Installation instructions are provided with the Sanitizer Stand and must be carefully followed to ensure the proper operation of the Sanitizer Stand. In the event of mis-use or failure to properly install the Sanitizer Stand, no retailer, its officers, directors, employees, affiliates, partners, suppliers or licensors shall, under any circumstances, be responsible or liable for any direct, indirect, incidental, consequential, special or exemplary damages for property loss or personal injury arising out of or in connection with the use of the Sanitizer Stand.