


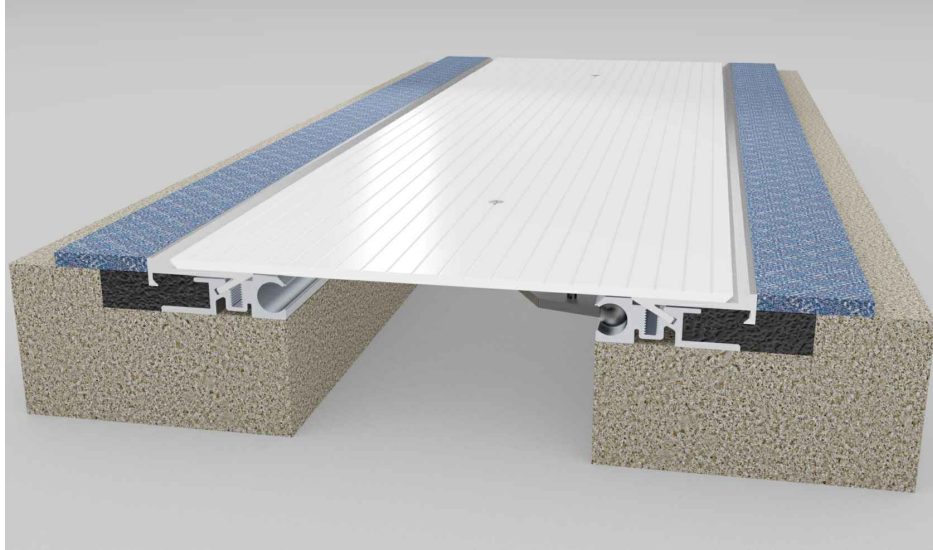

## Installation Procedure

### Wabo® SeismicFloor Series Model(s) FNB200 - 2400 Horizontal Expansion Control Systems

The following installation procedure is very important and must be fully understood prior to beginning any work. To ensure proper installation and performance of expansion joint system the following actions must be completed by the installing contractor. Failure to do so will affect product warranty.

1. Carefully read and understand installation procedure. Contact Sika Emseal's Technical Service Department at 508-836-0280 for product assistance.
2. Inspect all shipments and materials for missing or damaged components and hardware upon arrival. Contact Customer Service at 508-836-0280 with Emseal's order number and invoice for prompt assistance.
3. Inspect substrate or adjacent construction for acceptance before beginning work. Report unacceptable construction to the project manager for scheduled repair work.
4. Review Emseal shop drawings for project specific detailed information if Engineering services were provided at time of order.

## Standard Components



FNB Aluminum Base Member  
(Models: 200 - 400)  
P/N: 11112



Aluminum Base Member  
(Models: 500 - 2400)  
P/N: 15804



1/4" x 2-1/4" Concrete Screw  
P/N: 6524




1/4" x 5/8" Screw  
P/N: 5620




1/4" x 1 1/4" Screw  
P/N: 5621

Components shown below vary in size depending on model of system




| Cover Plates |         |                        |                  |
|--------------|---------|------------------------|------------------|
| Model        | "A"     | Part Number (Material) |                  |
|              |         | Alum                   | Stnls Stl        |
| FNB200       | 4 7/8"  | 12150                  | *SS-0.1875-4.875 |
| FNB400       | 6 7/8"  | 12151                  | *SS-0.1875-6.875 |
| FNB600       | 10 3/4" | 12152                  | *SS-0.1875-10.75 |
| FNB800       | 14 1/4" | 12153                  | *SS-0.1875-14.25 |
| FNB1000      | 16 5/8" | 12154                  | *SS-0.250-16.625 |
| FNB1200      | 19 5/8" | 12155                  | *SS-0.250-19.625 |
| FNB1800      | 29"     | 12156                  | *SS-0.250-29.00  |
| FNB2400      | 36"     | 12157                  | *SS-0.250-36.00  |


\*Denotes P/N Prefix "FNB-CVR-..."




| Self-Centering Bar |         |             |
|--------------------|---------|-------------|
| Model              | "B"     | Part Number |
| FNB200             | 7"      | 11089       |
| FNB400             | 12 3/8" | 15643B      |
| FNB600             | 12 3/8" | 15643B      |
| FNB800             | 18 3/8" | 15630       |
| FNB1000            | 18 3/8" | 15630       |
| FNB1200            | 22 3/8" | 15631       |
| FNB1800            | 32 3/8" | 15644       |
| FNB2400            | 38 3/8" | 15604       |

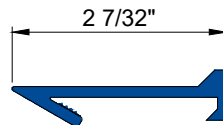

FNB600 Aluminum  
Extension Flange  
P/N: 11015

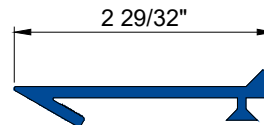


FNB800 Aluminum  
Extension Flange  
P/N: 11091

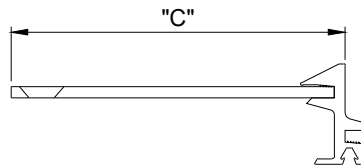


| Aluminum Extension Flange |          |             |
|---------------------------|----------|-------------|
| Model                     | "C"      | Part Number |
| FNB1000                   | 3 1/4"   | 12040       |
| FNB1200                   | 3 3/4"   | 12041       |
| FNB1800                   | 5 7/16"  | 12170       |
| FNB2400                   | 5 15/16" | 12171       |

See Sheet 4 for Aluminum  
Extension Flange Design Configurations

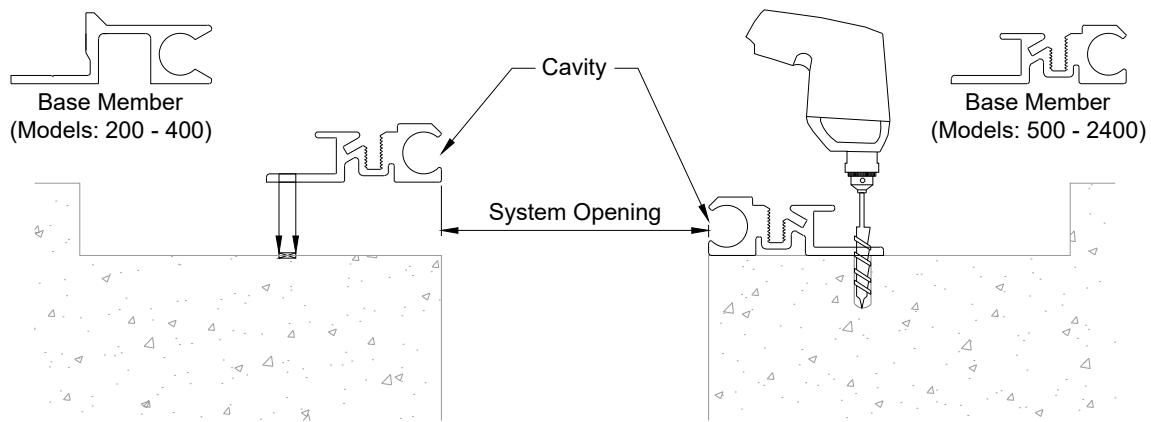


1

Position the base members on the block-out so that the space between the cavity faces matches the listed opening for the system size being installed. Using base member as a template and with its position fixed, drill hole for 1/4" x 2-1/4" concrete screw (P/N 6524) to proper depth. Clean out holes.

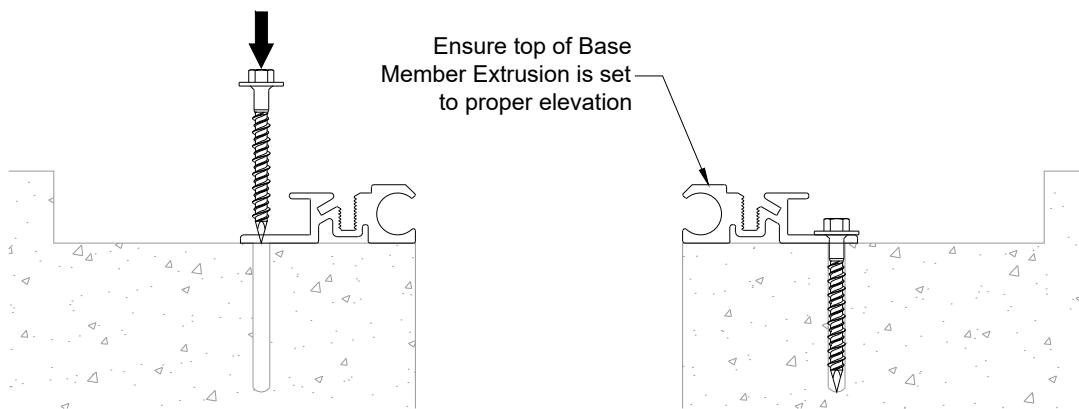


2

Follow industry-standard practices for proper fastener installation.  
**Caution:** Do not install all base members prior to reviewing step 6.

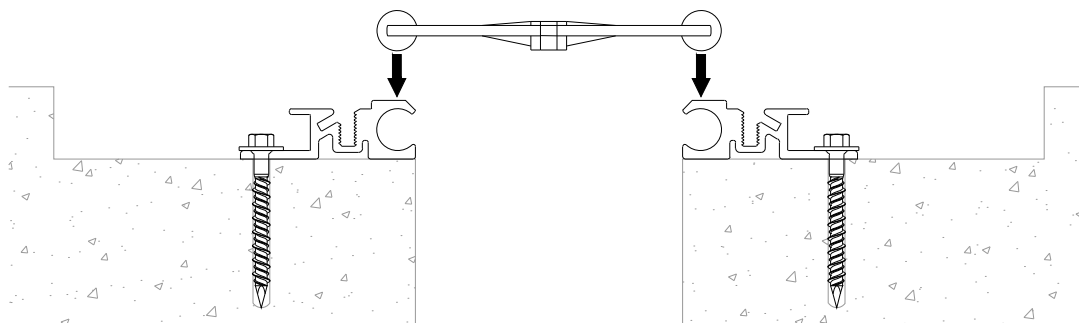

3


As work progresses with placement of base members, install self-centering bars by sliding their spherical ends into the ends of the base members through the circular cavities. Set at an approximate spacing of 24" O.C.  
**IMPORTANT:** Ensure that the "top" indicator is facing up and that all bars are in same orientation.

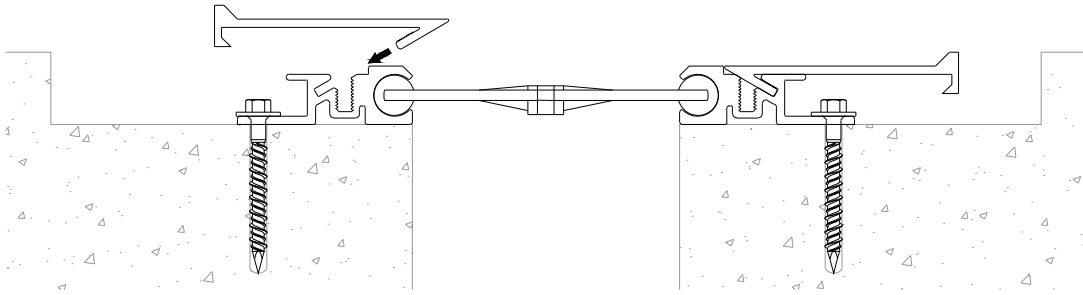

**4A**

(FNB600 - FNB800)


Attach aluminum extension flange to base member. Aluminum extension type depends on system size. Check page 1 for proper extension size.

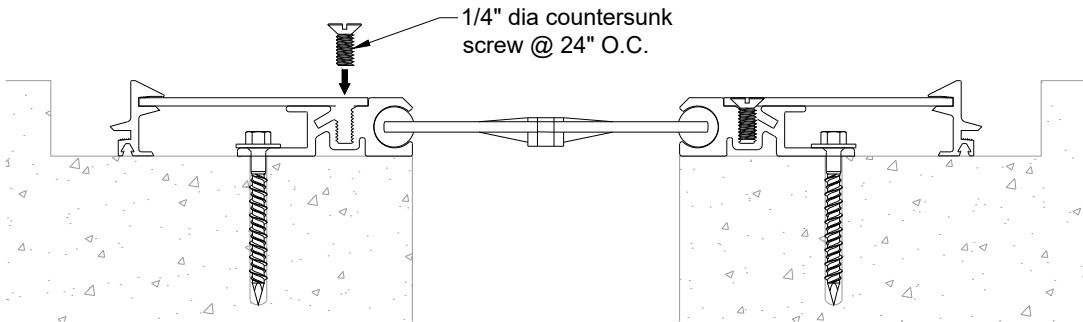

**4B**


(FNB1000 - FNB2400)

Attach aluminum extension flange to base member. Utilizing the 1/4" Dia x 5/8" screw (P/N 5620), fasten extension flange to the top of the aluminum base member at the pre-drilled hole locations.

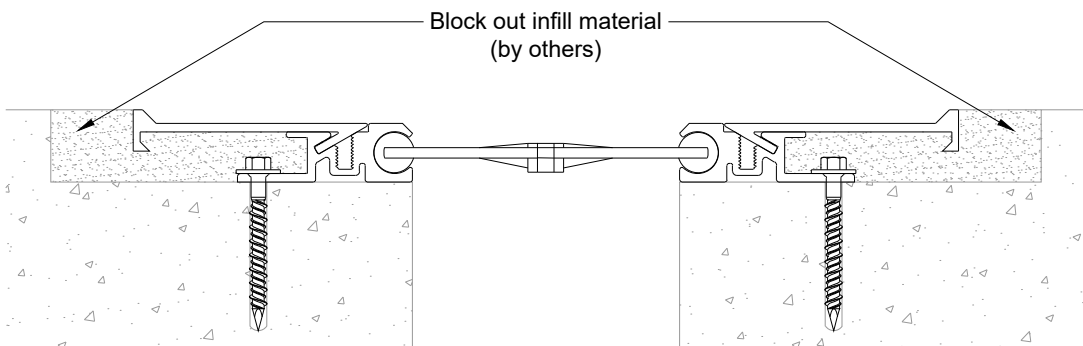


**5**

Fill block out with high quality non-shrink grout material. Protect surfaces during placement of filler material.

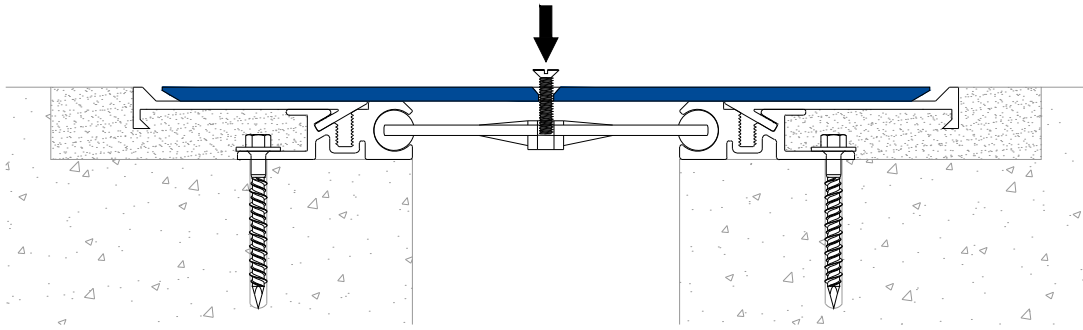

6


Position the coverplate over expansion opening, align pre-drilled holes in coverplate with threaded insert in self-centering bars. Fasten with 1/4" x 1-1/4" flat screw (P/N 5621). Tighten to create measurable tension in the bar.

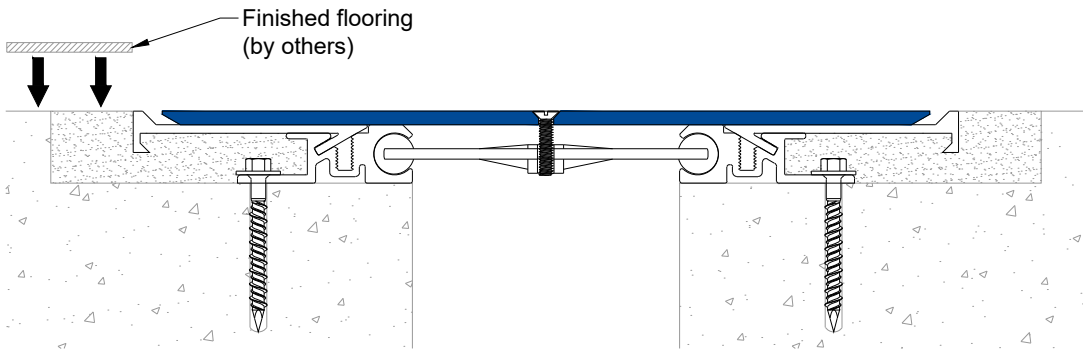


7

Install flooring material. Ensure flush installation with top of expansion joint system.  
**Caution:** Contact flooring manufacturer to discuss application and procedure for proper installation.


## Aluminum Extension Flange Designs

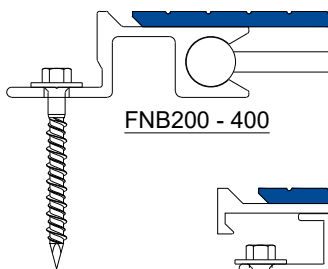


FNB200 - 400

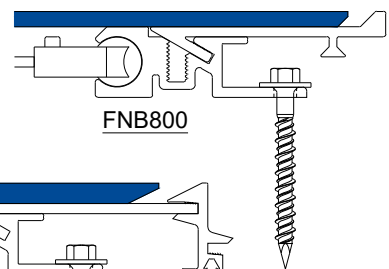

FNB800

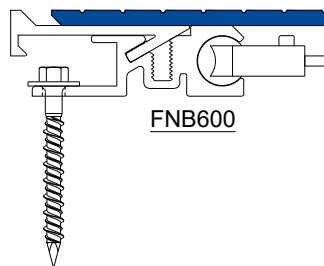

FNB600

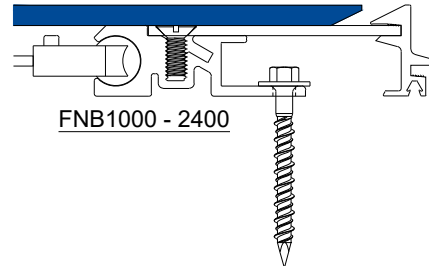

FNB1000 - 2400

Information provided herein, including but not limited to, any drawing, design, photograph, graphic, or statement(s) ("Materials") are proprietary and the property of Sika Emseal. ("Company"). Reproduction, translation, or reduction to any electronic medium or machine readable form, in whole or part, is strictly prohibited, except for the express purpose for which it has been furnished, without prior written consent of Company. All Materials contained herein are provided by Company for information purposes only. Company reserves the right to amend or withdraw any information contained in the Materials without notice. All technical or other advice by Company, whether verbal or written, concerning products, or the use of products in specific situations ("Advice") is given by Company and is used at the User's own risk.

Sika Emseal  
25 Bridle Lane, Westborough, MA 01581 USA  
Phone: 508-836-0280 / Fax 508-836-0281  
[www.emseal.com](http://www.emseal.com)

Rev. 1.4 01-20-2026



**BUILDING TRUST**

